



M27

Seven Channel Power Amplifier

ENGLISH




Owner's Manual

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS FOR LATER USE.


FOLLOW ALL WARNINGS AND INSTRUCTIONS MARKED ON THE AUDIO EQUIPMENT.

- 1 Read instructions** - All the safety and operating instructions should be read before the product is operated.
- 2 Retain instructions** - The safety and operating instructions should be retained for future reference.
- 3 Heed Warnings** - All warnings on the product and in the operating instructions should be adhered to.
- 4 Follow Instructions** - All operating and use instructions should be followed.
- 5 Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6 Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7 Water and Moisture** - Do not use this product near water—for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
- 8 Accessories** - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- 9**  A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
- 10 Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 11 Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
The primary method of isolating the amplifier from the mains supply is to disconnect the mains plug. Ensure that the mains plug remains accessible at all times. Unplug the AC power cord from the AC outlet if the unit will not be used for several months or more.
- 12 Grounding or Polarization** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 13 Power - Cord Protection** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

- 14 Outdoor Antenna Grounding** - If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

NOTE TO CATV SYSTEM INSTALLER

This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

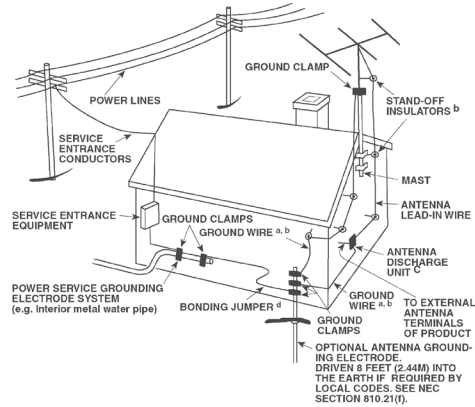

- 15 Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 16 Power Lines** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 17 Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 18 Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

WARNING: THE APPARATUS SHOULD NOT BE EXPOSED TO DRIPPING OR SPLASHING, AND OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHOULD NOT BE PLACED ON THE APPARATUS. AS WITH ANY ELECTRONIC PRODUCTS, USE CARE NOT TO SPILL LIQUIDS INTO ANY PART OF THE SYSTEM. LIQUIDS CAN CAUSE A FAILURE AND/OR A FIRE HAZARD.

19 Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a) When the power-supply cord or plug is damaged.
- b) If liquid has been spilled, or objects have fallen into the product.
- c) If the product has been exposed to rain or water.
- d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e) If the product has been dropped or damaged in any way.
- f) when the product exhibits a distinct change in performance-this indicates a need for service.

20 Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

21 Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

22 Wall or Ceiling Mounting - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

23 Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAYBE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.



The equipment draws its nominal non-operational power from the AC outlet with its POWER switch at the ON position.

The socket-outlet shall be installed near the apparatus and shall be easily accessible.

CAUTION

Changes or modifications to this equipment not expressly approved by NAD Electronics for compliance could void the user's authority to operate this equipment.

CAUTION REGARDING PLACEMENT

To maintain proper ventilation, be sure to leave a space around the unit (from the largest outer dimensions including projections) that is equal to or greater than shown below.

Left and Right Panels: 10 cm

Rear Panel: 10 cm

Top Panel: 10 cm

IMPORTANT SAFETY INSTRUCTIONS

NOTES ON ENVIRONMENTAL PROTECTION



At the end of its useful life, this product must not be disposed of with regular household waste but must be returned to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's manual and packaging, point this out.

The materials can be reused in accordance with their markings. Through re-use, recycling of raw materials or other forms of recycling of old products, you are making an important contribution to the protection of our environment. Your local administrative office can advise you of the responsible waste disposal point.

INFORMATION ABOUT COLLECTION AND DISPOSAL OF WASTE BATTERIES (DIRECTIVE 2006/66/EC OF THE EUROPEAN PARLIAMENT AND THE COUNCIL OF EUROPEAN UNION) (FOR EUROPEAN CUSTOMERS ONLY)



Batteries bearing any of these symbols indicate that they should be treated as "separate collection" and not as municipal waste. It is encouraged that necessary measures are implemented to maximize the separate collection of waste batteries and to minimize the disposal of batteries as mixed municipal waste.

Pb



Hg



Cd

End-users are exhorted not to dispose waste batteries as unsorted municipal waste. In order to achieve

a high level of recycling waste batteries, discard waste batteries separately and properly through an accessible collection point in your vicinity. For more information about collection and recycling of waste batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

By ensuring compliance and conformance to proper disposal of waste batteries, potential hazardous effects on human health is prevented and the negative impact of batteries and waste batteries on the environment is minimized, thus contributing to the protection, preservation and quality improvement of the environment.

RECORD YOUR MODEL NUMBER (NOW, WHILE YOU CAN SEE IT)

The model and serial number of your new M27 are located on the back of the cabinet. For your future convenience, we suggest that you record these numbers here:

Model no:

Serial no.:

WHAT'S IN THE BOX

- Packed with your M27 you will find
- A detachable mains power cord
 - Four pieces of magnetic feet
 - USB flash drive
 - Cleaning cloth
 - Quick Setup Guide


NOTE

Connect supplied USB flash drive to any compatible device to view the M27 owner's manual and Quick Setup Guide.

QUICK SETUP GUIDE

In case you simply cannot wait to experience the performance of your new NAD M27 Seven Channel Power Amplifier, the following QUICK SETUP GUIDE is recommended to help you get started.

Ensure that the M27 is unplugged before making any connections. It is also advisable to power-down or unplug all associated components while making or breaking any signal or AC power connections.

- 1 Set the external source's volume control to minimum level. External source can be a preamplifier, processor, amplifier or any applicable device.
- 2 Set SELECT switch to BALANCED or SINGLE-ENDED. Connect the analog audio output of your external source to the M27 rear panel's BALANCED or SINGLE-ENDED analog audio input. Depending upon the source's configuration, analog audio input connection can be made up to seven channels either via BALANCED or SINGLE-ENDED input ports.
- 3 Connect your speakers to the SPEAKER terminals of M27. Note suggested speaker connections as reflected in the rear panel channel allocations.
- 4 Plug-in to a mains power source the M27's supplied mains power cord. Connect corresponding end of the mains power cord to the AC mains input of M27 and the plug connected to a mains power source.
- 5 Plug-in also to a mains power source the external source's mains power cord. Power up the external source ahead of the M27.
- 6 Set to ON the rear panel POWER switch of M27. The M27 goes to standby mode as shown by the amber status condition of the Power indicator.
- 7 Press  (Standby) button for the M27 to be switched ON from standby mode. The Power indicator will turn from amber to bright/white color. The M27 is ready for operation.
- 8 Adjust the external source's volume control according to desired listening level.

SAVE THE PACKAGING

Please save the box and all of the packaging in which your M27 arrived. Should you move or otherwise need to transport your M27, this is by far the safest container in which to do so. We've seen too many otherwise perfect components damaged in transit for lack of a proper shipping carton, so please: Save that box!

NOTES ON INSTALLATION

- Your NAD M27 should be placed on a firm, level surface.
- Avoid placing the unit in direct sunlight or near sources of heat and damp.
- Allow adequate ventilation.
- Do not place the unit on a soft surface like a carpet.
- Avoid placing the M27 inside a closed cabinet that is not well ventilated as this may compromise the M27's performance and reliability.
- Ensure that the M27 is unplugged before making any connections.
- For best performance, use quality speaker leads of 16 gauge (1.5mm²) thickness or more.
- If the unit is not going to be used for some time, disconnect the plug from the mains power source.
- Use a dry cloth for cleaning.

DO NOT REMOVE THE COVER; THERE ARE NO USER-SERVICEABLE PARTS INSIDE.

BARE WIRES AND PIN CONNECTORS




WARNING: The terminals marked with this symbol are hazardous live. External wiring connected to these terminals requires installation by an instructed person or the use of ready-made leads or cords.

Bare wires and pin sockets should be inserted into the hole in the shaft of the terminal. Unscrew the speaker terminal's plastic bushing until the hole in the screw shaft is revealed. Insert the pin or bare cable end into the hole and secure the cable by tightening down the terminal's bushing. Ensure bare wire from the speaker cables does not touch the back panel or another socket. Ensure that there is only 1/2" (1cm) of bare cable or pin and no loose strands of speakers wire.


FEET INSTALLATION

The supplied magnetic feet can be easily installed by aligning and attaching them to their corresponding foot shoe. Refer to illustration below.

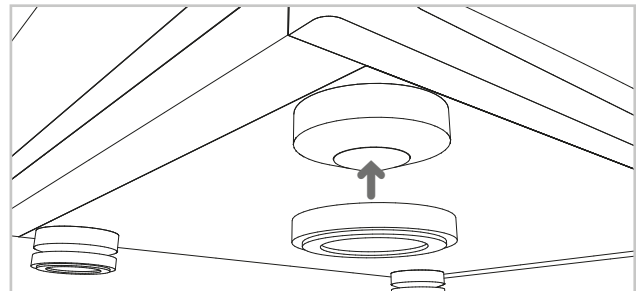

IDENTIFICATION OF CONTROLS

FRONT PANEL

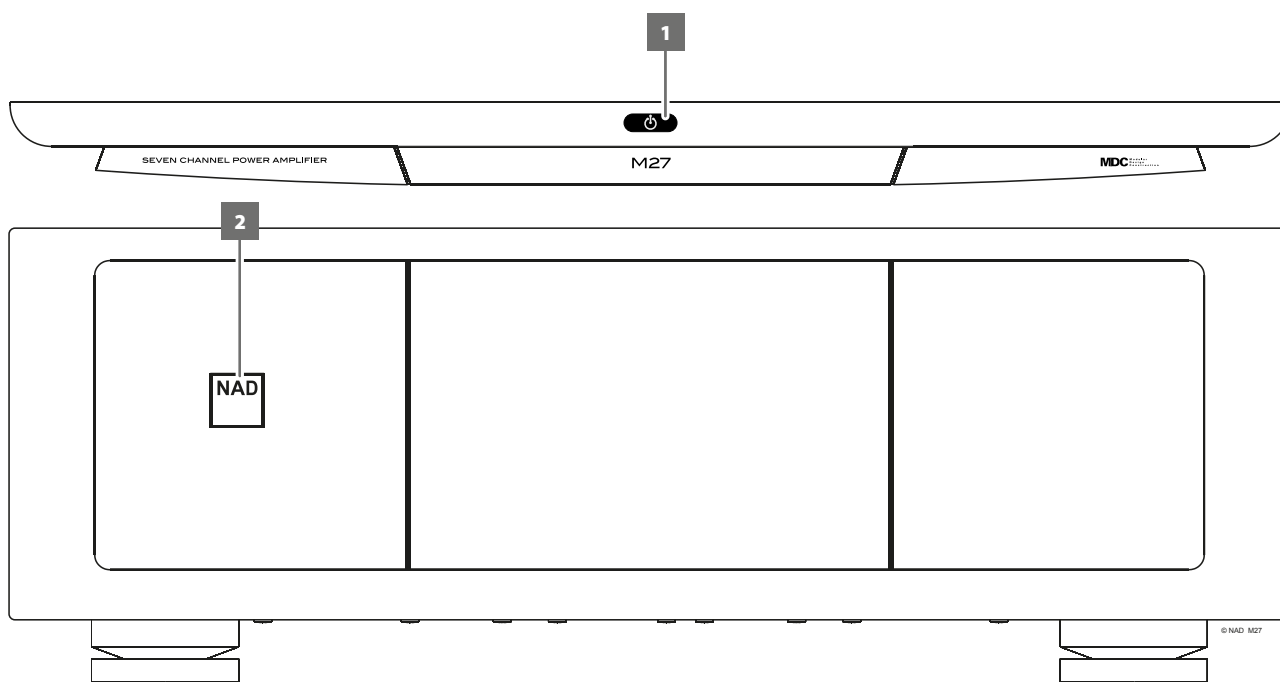

1 (STANDBY)

- Press (Standby) button for the M27 to be switched ON from standby mode. The Power indicator will turn from amber to bright/white color.
- Press and hold (Standby) button until M27 switches back to standby mode. The Power indicator will illuminate to amber color at standby mode.
- The (Standby) button cannot activate the M27 with the rear panel POWER switched off.

2 POWER INDICATOR (NAD LOGO)

- The NAD logo in the front panel also serves as a Power indicator.
- Power indicator colors
 - Bright/white - Normal operating mode
 - Amber - Standby mode
 - Red - Protect mode

IMPORTANT NOTE

For the (Standby) button to activate, two conditions must be completed.

- Plug-in the supplied mains power cord to a mains power source. Connect corresponding end of the mains power cord to the AC mains input of M27 and the plug connected to a mains power source.
- The rear panel POWER switch must be set to ON position.

AUTO STANDBY


The M27 can be setup to automatically go to standby mode if there is no active source input within 30 minutes. Auto standby mode can be enabled or disabled by the following steps.

Enable Auto Standby mode

- With M27 at operating mode, press and hold the LED LEVEL button until the Power indicator (NAD logo) flashes once.
- At operating mode, the M27 will automatically go to standby mode if there is no active source input within 30 minutes.

Disable Auto Standby mode

- With M27 at operating mode, press and hold the LED LEVEL button until the Power indicator (NAD logo) flashes twice.
- At operating mode, M27 will not automatically go to standby mode even if there is no active source input within 30 minutes. Press to switch M27 from operating mode to standby mode.

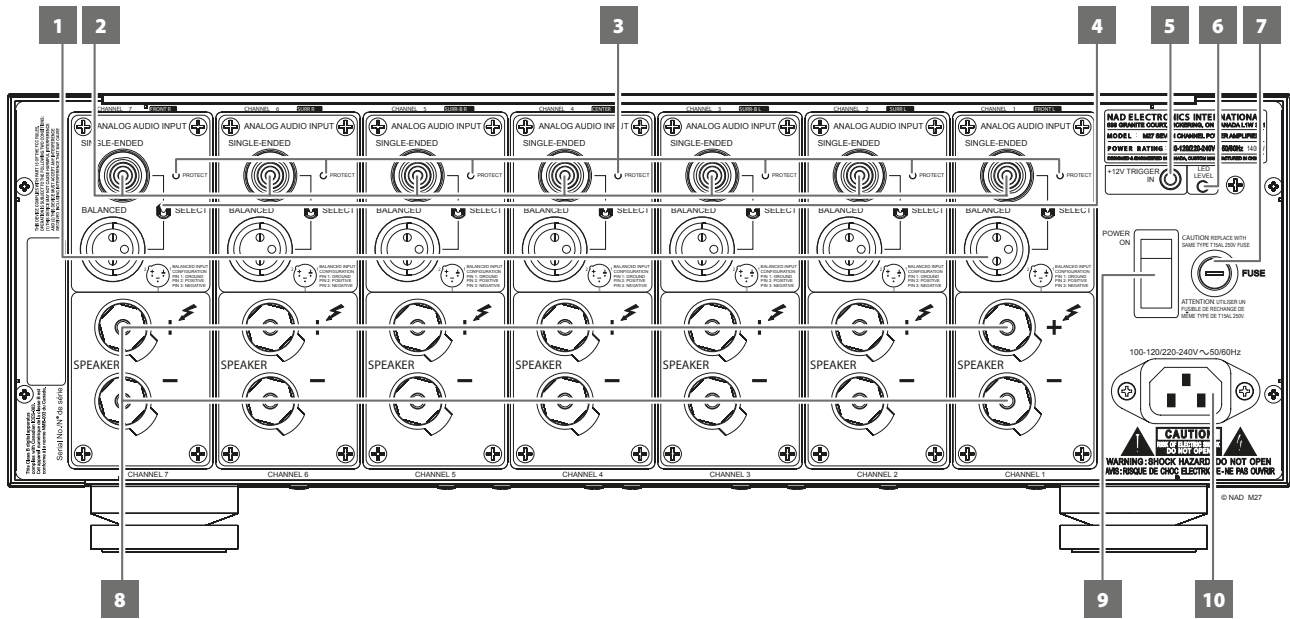

ATTENTION!

Ensure that the M27 is unplugged before making any connections. It is also advisable to power-down or unplug all associated components while making or breaking any signal or AC power connections.

1 BALANCED

- Use the BALANCED analog audio input of the M27 if the external source to be connected has BALANCED audio output. Superior audio quality is ensured with the distinctive noise reduction capability of BALANCED connection with XLR jacks.
- With BALANCED as the selected audio input, ensure that SELECT switch is set to BALANCED.
- For optimum heat dissipation in an AV surround system, the following audio channel allocations are recommended:
Channel 1 = Front Left speaker
Channel 2 = Surround Left speaker
Channel 3 = Surround Back Left speaker
Channel 4 = Center speaker
Channel 5 = Surround Back Right speaker
Channel 6 = Surround Right speaker
Channel 7 = Front Right speaker

PIN CONFIGURATION OF BALANCED XLR JACK

Pin 1: Ground
Pin 2: Positive (signal live)
Pin 3: Negative (signal return)

2 SINGLE-ENDED

- Use single-ended analog audio input for sources (preamplifiers or processors) that are not equipped with BALANCED analog audio output.
- With SINGLE-ENDED as the selected audio input, ensure that SELECT switch is set to SINGLE-ENDED.

3 PROTECT

- When a specific channel goes to protect mode, the corresponding PROTECT LED will turn red. The other amplifiers that did not go to protect mode will continue to function as indicated by their respective PROTECT LEDs illuminated in green.

PROTECT LED INDICATOR COLORS

CONDITION	PROTECT LED COLOR	POWER INDICATOR (NAD LOGO) COLOR
Normal operation	Green	Bright/white
Overheat	Red (per applicable channels; other channels may remain green)	Bright/white
Short circuit	No light (all channels)	Red

IMPORTANT NOTES

- Always turn OFF the M27 and other components in the system before connecting or disconnecting anything to the BALANCED audio input jacks.
- Before switching ON the M27 from standby mode for the first time, make sure that the volume control of the external source is set to minimum level position. This prevents inadvertently beginning a session at excessive volume.
- Depending upon the source's configuration, analog audio input connection can be made up to seven channels either via BALANCED or SINGLE-ENDED input ports.

IDENTIFICATION OF CONTROLS

REAR PANEL

PROTECT MODE

If one or more PROTECT LEDs turn red or become all extinguished, this indicates that the protection circuitry of the M27 had been engaged. Immediately press the Standby button, turn off Power switch and then unplug the mains power cord from the mains power source. Undertake the following

- Check if all speaker wires are connected correctly and that none of the wires are damaged, causing a short circuit.
- Another cause may be excessive heat build-up inside the amplifier. Make sure there is adequate ventilation around the amplifier and that none of its ventilation slots, top or bottom are blocked. After the amplifier has cooled down, it will function normally again.
- In case one or more of the PROTECT LEDs or Power indicator remained illuminated in red despite the checks mentioned above, immediately press the Standby button, turn off Power switch and then unplug the mains power cord from the mains power source. Have the unit inspected by a qualified service technician before attempting to use it again.

4 SELECT


- Use this switch to select the type of analog audio input.
- SELECT switch settings
Upper position – SINGLE-ENDED input is selected.
Lower position – BALANCED input is selected.

WARNING!

Do not adjust the SELECT switch while the M27 is at operating mode. Use SELECT switch to choose BALANCED or SINGLE-ENDED only when the M27 is at standby mode or powered down.

5 +12V TRIGGER IN

- The +12V Trigger input allows the M27 to be switched remotely from standby mode to ON and vice-versa by an ancillary equipment such as a preamplifier, AV processor, etc. The controlling device must be equipped with a 12V trigger output to use this feature.

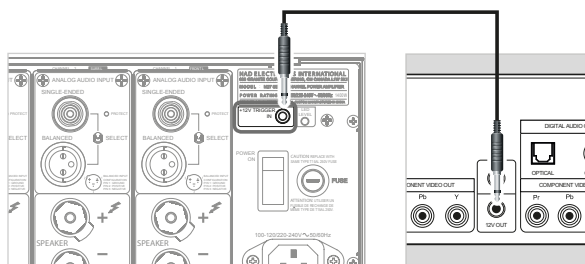

WARNING

The front panel (Standby) button is disabled as long as the male plug of the mono cable (with or without +12V DC) is connected to M27's +12V TRIGGER IN. Unplug the mono cable for the M27 to be normally switched ON (or back to standby mode) using the front panel (Standby) button.

6 LED LEVEL (DIMMER)

- Toggle to reduce or restore Power indicator brightness or completely turn it off.

7 FUSE HOLDER

- In the unlikely event a fuse needs to be replaced, unplug the mains power cord from the wall. Then, remove all connections from the amplifier. Use a flathead screw driver or similar to open the fuse holder via the slot indicated. With the screw driver in place, push and turn counterclockwise to open the fuse holder.
- Only replace the fuse with the same type, size, and specification.

IMPORTANT NOTICE

Do not use any substitute fuses of different types or with different ratings or values. Failure to observe this precaution may cause damage to the amplifier circuits and may create a fire hazard and/or defeat the safety built into the amplifier and may void the warranty.

8 SPEAKER

- The M27 is equipped with gold-plated, color-coded, transparent and special high-current binding-post speaker terminals.
- Connect FRONT L, FRONT R, CENTER, SURR R, SURR L, SURR-BL and SURR-BR speaker terminals to corresponding speakers. Make sure the "+" (red) terminal and "-" (black) terminal are connected to the corresponding "+" and "-" terminals of the speaker. Use extra care to ensure that no stray wires or strands cross between posts or terminals at either end.
- The M27 is designed to produce optimum sound quality when connected to speakers with impedances within its operating range. Please make sure that all the speakers are rated 4 ohms minimum per speaker.

NOTE

Use stranded wire of at least 16 gauge (AWG). Connections to the M27 can be made with banana plugs or by using bare wire or pins. Use the transverse hole through the post for bare-wire or pin connections. By loosening the terminal's plastic nut, make a clean, neat connection and re-tighten carefully. To minimize the danger of short-circuit, ensure that only 1/2-inch of exposed wire or pin is employed when connecting.

9 POWER



- Supply the AC mains power to the M27.
- When the POWER switch is set to ON position, the M27 goes to standby mode as shown by the amber status condition of the Power indicator. Press (Standby) button to switch ON the M27 from standby mode.
- If you intend not to use the M27 for long periods of time (such as when on vacation), switch off the POWER switch.
- The (Standby) button cannot activate the M27 with the rear panel POWER switched off.

10 AC MAINS INPUT

- The M27 comes supplied with two types of detachable mains power cord. Select applicable type for your usage. Connect corresponding end of the mains power cord to the AC mains input of M27 and the plug connected to a mains power source.
- Always disconnect the mains power plug from the mains power source first, before disconnecting the cable from the M27's AC Mains input socket

DIGITAL POWERDRIVE

The M27 uses NAD's proprietary Digital PowerDrive™ amplifier technology that allows substantial additional power for short periods of time. Research has shown that the peak to average power required to faithfully reproduce music can be a factor of ten for well recorded performances. Digital PowerDrive uniquely satisfies this requirement. Music sounds more dynamic and "open" with PowerDrive because the musical transients that are present in a live performance are not reduced in amplitude or "compressed".

CONDITION	POSSIBLE CAUSES	POSSIBLE SOLUTIONS
No power.	• Mains power cord unplugged from mains power source or from M27's AC mains input.	• Connect the mains power cord to M27's AC mains input and then plug into a mains power source.
	• Power switch is off.	• Switch ON the Power switch.
	• M27 at standby mode.	• Press  (Standby) button to switch ON the M27 from standby mode.
M27 always at standby mode; cannot be switched ON using the  (Standby) button.	• A mono plug is plugged-in at the +12V TRIGGER IN port of the rear panel.	• Unplug the mono plug.
No sound.	• No input signal applied through the analog audio input ports.	• Check that there is active input signal applied through the analog audio input ports.
	• External source volume control is set to minimum level.	• Turn up external source's volume control until audio is heard.
No sound one channel.	• Speaker not properly connected or damaged.	• Check connections and speakers.
	• Input lead disconnected or damaged.	• Check leads and connections.
There is no BALANCED audio output.	• SELECT switch is set to SINGLE-ENDED.	• Set SELECT switch to BALANCED.
There is no SINGLE-ENDED audio output.	• SELECT switch is set to BALANCED.	• Set SELECT switch to SINGLE-ENDED.

REFERENCE

SPECIFICATIONS

OVERALL SPECIFICATIONS

Continuous output power into 8 ohms and 4 ohms	≥ 180 W (ref. rated THD, 20 Hz – 20 kHz, all channels driven)
Rated THD (250 mW to rated power, CCIF IMD, DIM 100)	≤ 0.005 % (ref. 20 Hz - 20 kHz)
IHF dynamic power	8 ohms : 320 W (all channels driven)
	4 ohms : 700 W (one channel driven)
	2 ohms : 650 W (one channel driven)
Damping factor	> 750 (ref. 8 ohms, 50 Hz and 1 kHz)
Input sensitivity	1.3 V (ref. rated power)
Input impedance	Balanced : 47 kohms
	Single-ended : 23 kohms
Signal-to-noise ratio, A- weighted, ref. 1W	Balanced : > 94 dB
	Single-ended : > 90 dB
Signal-to-noise ratio, A- weighted, ref. rated power	Balanced : > 118 dB
	Single-ended : > 112 dB
Frequency response	± 0.1 dB (ref. 20 Hz - 20 kHz)
	- 2.5 dB at 3 Hz and 100 kHz
Time to go to Standby mode at no input signal	≤ 30 minutes

POWER CONSUMPTION

Rated power	1600 W (120V 60Hz, 230V 50Hz)
Standby power	< 0.5 W
Idle power	< 90 W

DIMENSION AND WEIGHT

Unit dimensions (W x H x D)	435 x 156 x 380 mm (Gross)*
	17 ¹ / ₈ x 6 ³ / ₁₆ x 15 inches
Net weight	14.1 kg (31.1 lbs)
Shipping weight	20.4 kg (45.0 lbs)

* - Gross dimension include feet, front panel and rear panel extensions (knobs, buttons, speaker terminals, sub fascia, etc.)

NAD SHALL NOT BE HELD LIABLE FOR ANY TECHNICAL OR USER INTERFACE DISCREPANCIES IN THIS MANUAL. THE M27 OWNER'S MANUAL MAY BE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE. CHECK OUT WWW.NADELECTRONICS.COM FOR THE LATEST VERSION OF THE M27 OWNER'S MANUAL.



www.NADelectronics.com

**©2014 NAD ELECTRONICS INTERNATIONAL
A DIVISION OF LENBROOK INDUSTRIES LIMITED**

All rights reserved. NAD and the NAD logo are trademarks of NAD Electronics International, a division of Lenbrook Industries Limited.
No part of this publication may be reproduced, stored or transmitted in any form without the written permission of NAD Electronics International.
While every effort has been made to ensure the contents are accurate at the time of publication, features and specifications may be subject to change without prior notice.

M27_ENG_OM_V06 - JUL 2014